

Tips on how to apply the **ASLAN** Whiteboard- and Ferrous films

Many thanks for choosing our high-quality self-adhesive films

ASLAN's self-adhesive whiteboard, blackboard and ferrous films can be used to turn smooth surfaces into re-writable, dry-wipeable and even magnetic-receptive surfaces. Thanks to the virtually endless variety of options for combining ASLAN self-adhesive films, you can give your creativity free rein and integrate daily changes in restaurants, seminar rooms, meeting rooms, schools, kindergartens, hospitals, surgeries or in your own home.

General instructions on applying our self-adhesive films

Assuming the surface is generally suitable for mounting, you should first clean it thoroughly. Please pay attention to the fact that it must be free from dust, dirt, grease and separating substances. The surface must be dry as well. The length of films can be applied side by side or overlapping, with or without a twin-seam cut.

The length of films should be ideally angled before removing the liner in order to avoid repositioning without liner.


A repositioning without liner can result into a reduced adhesion.

We recommend to apply the ASLAN memo board films horizontally in order to avoid writing on a raw edge, you would have with these vertical appliances. But in general, you can apply the films both horizontally as well as vertically.

Variation of application


Side by side application

First you place the first length of film. All following sheets have to be applied side by side flush fitting. This application should be used from experienced people or thick materials (as i.e. FerroSoft Whiteboard ASLAN FF 550).

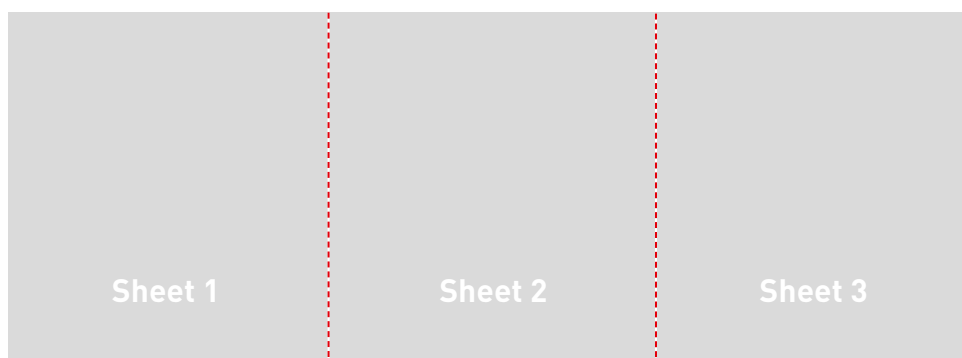


Overlapping application


First you place the first sheet/layer of the film. Every other sheet/layer has to be applied with an overlap (approx. 1-2 cm). The overlap remains.

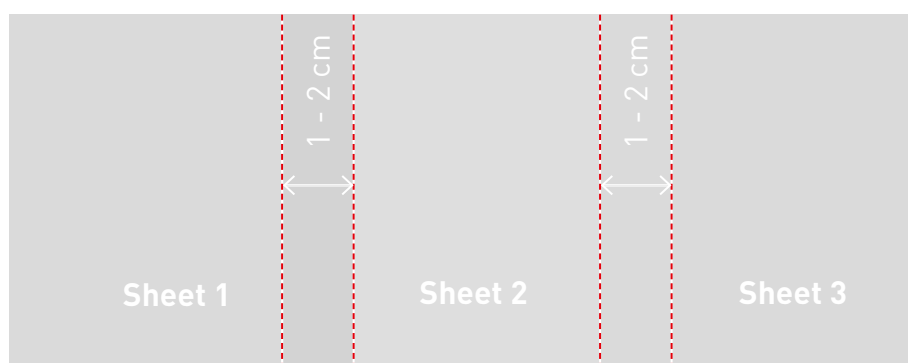


Overlapping application with twin-seam cut

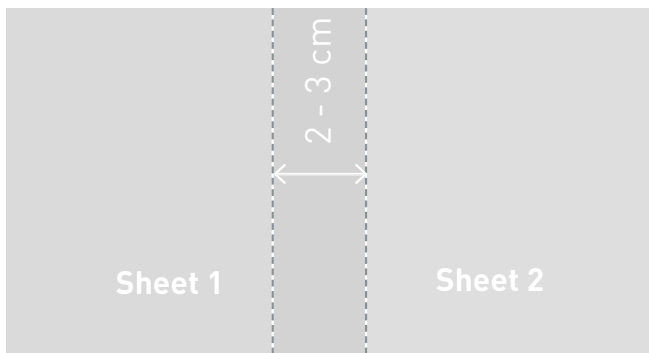


- 1 Concerning the overlapping application with twin-seam cut apply two sheets of films overlapping (approx. 2-3 cm).

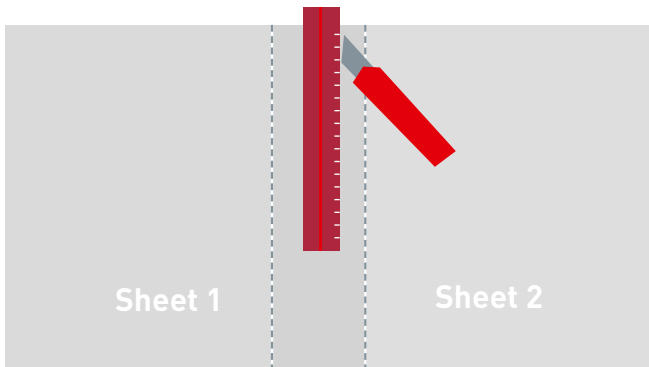

- 2 Afterwards cut both sheets approximately in the middle of the overlap using cutter and ruler.

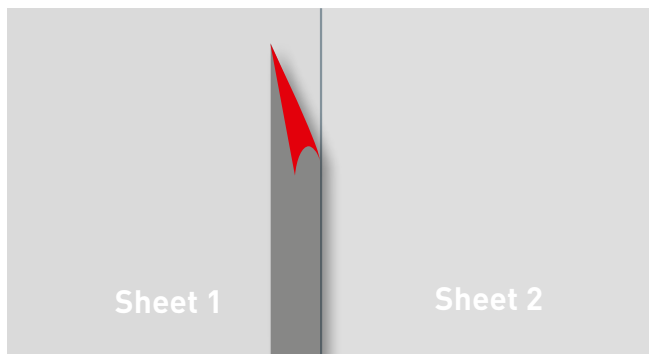

- 3 The next step must be made subsequently in order to avoid high adhesion between the materials.

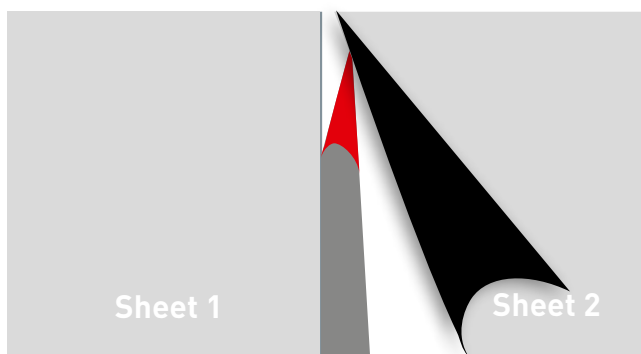

- 4 Then raise the film from where the strip has been removed from take-off the subjacent strip.

Repeat steps 1-4 (orders 5) for any additional sheet/layer we recommend to rework the whole application with high pressure.